SEGA®

Major League

The on-screen regulation sized ball park is another first for SEGA, the result of scrolling the screen vertically and horizontally so as to correlate with the movement of the ball.

In addition a CONTROL BALL that manipulates the speed and direction of game play also provides the player with the ability to maneuveur realistic and high action plays.

PRINTED MATTER. © SEGA 1986

Major League

GAME FEATURES

★*A FAST ball with speeds up to 170 KPH, along with various other types of pitches, can be thrown as strategy dictates.*

★*Everything from BUNTS to HOMERS can be hit*

- OPEN/SQUARE/CLOSED stance may be selected to maximize your batting efficiency.

★*RUNNING plays, including feetfirst SLIDES*

- Various scenes which depict the realism of steals, touch-up plays, etc. are vividly displayed on the screen, with the runner's speed only limited by how fast the CONTROL-BALL can be rotated

★*CONTINUE PLAY anyone?*

- This irresistible feature allows for the game to be continued when the allotted time has expired, and is sure to tempt a player into competing right up to the 9th frame or even into extra innings

OFFENSE

- The SWING lever has a FAKE BUNT feature
- Select either an OPEN or CLOSED stance
- Push this when selecting a PINCH HITTER, next roll the CONTROL BALL, and then push the button again
- For SLIDING, push this while running
- By using the CONTROL BALL, the speed and direction of the running, run backs and steals can be controlled

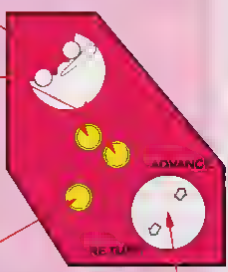

DEFENSE

PITCHING

- To select a RELIEF PITCHER, push this button roll the CONTROL BALL, then push the button again
- Throw a FAST ball by quickly turning the CONTROL BALL
- Roll the CONTROL BALL in the desired direction to throw strikes, balls or to hold the runner on base
- CURVE/BREAK FORK balls can freely be selected
- THROW Roll the CONTROL BALL in the desired direction
- To pursue a hit ball, keep this button pressed down and quickly spin the CONTROL BALL in the desired direction
- To pursue the runner after catching or picking up the ball, keep the button pressed down and rotate the CONTROL BALL

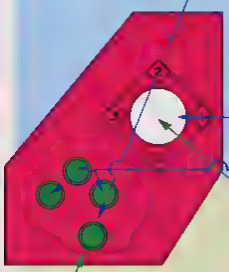

INFIELDER/ OUTFIELDER

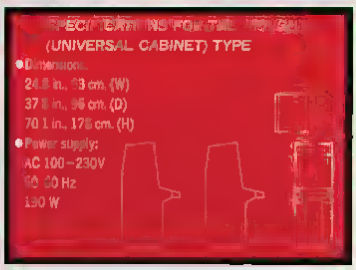

SEGA creates a "High Tech Life"™

SEGA®

Sega Enterprises Ltd
2-12 Haneda 1-chome Ota-ku Tokyo 144 Japan
Tel (03)743 7438 Fax (03)743 5639
Tlx J22357 SEGASTAR
Sega Enterprises, Inc (U.S.A.)
2149 Paragon Drive San Jose CA 95131
U.S.A. Tel (408)435 0201 Fax (408)435 0294
Sega Europe Limited
410-420 Rayners Lane Pinner Middx HA5
5DY England Tel 01 868 2331 Tlx 893601
SEGAUK G Fax 01-428 3137

Design and specifications subject to change without notice SG-8601E

DISTRIBUTED BY: